


PACKING LIST:

1. Bottom Tray - 1pcs
2. Top Tray - 1pcs
3. Frame - 2pcs
4. Horizontal Support:
 - 4pcs(for under 32U-height)
 - 6pcs(for over 32U-height)
5. Vertical Support - 4pcs
6. Side Door - 2pcs
7. Front Door - 1pcs
8. Rear Door - 1pcs
9. Shelf:
 - 3pcs(for over 42U-height)
 - 2pcs(from 32U-high to 42U -height)
 - 1pcs(for under 32U-high)
10. Fan Tray - 1pcs
11. Cover Panel - 3pcs

ACCESSORIES PACKAGE LIST:


1. M12*L90 Adjustable feet - 4pcs
2. Castor- 4pcs
3. Side support - 4pcs
4. M8*12 hexagon socket screw - 16pcs
5. M8 flange nut - 16PCS
6. M6*12 Screw:
 - 60pcs(for over 42U-high)
 - 56pcs(from 32U-high to 42U -height)
 - 36pcs(for under 32U-high)
7. 4mm Plastic Washer - 2pcs
8. M4*12 Self-tapping Screw - 18pcs
9. M6*12 Self-tapping Screw - 16pcs
10. M6 Cage Nut:
 - 60pcs(for over 42U-high)
 - 56pcs(from 32U-high to 42U - height)
 - 36pcs(for under 32U-high)
11. M6 Plastic Washer:
 - 60pcs(for over 42U-high)
 - 56pcs(from 32U-high to 42U -height)
 - 36pcs(for under 32U-height)

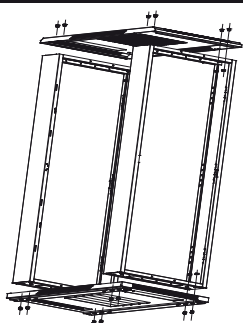

STEP 1:

Use 16pcs of M8*12 hexagon socket screws and 16pcs of M8 flange nuts to assemble the top tray, bottom tray and frame.


Refer to the left picture.

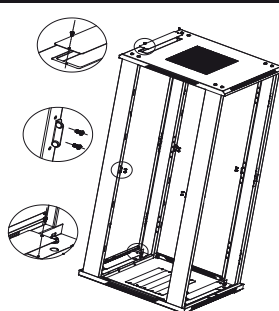

STEP 2:

Use M4*8 self-tapping screws to assemble the top cover. Use 8pcs of M4*8 self tapping screws to assemble the side supports.


Refer to the left picture.

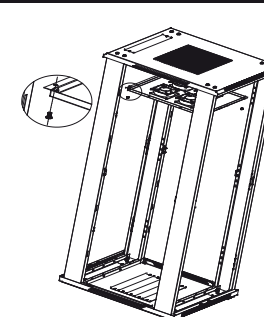

STEP 3:

Use 4pcs of M4*8 self-tapping screws to assemble the fan tray.


Refer to the left picture.

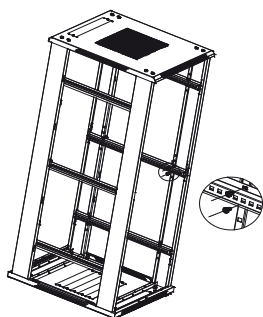

STEP 4:

Use 24pcs of M6*12 screws, M6 cage nuts and M6 plastic washers to assemble the horizontal supports.


Refer to the left picture.

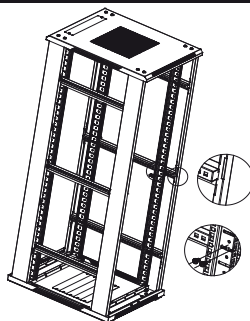

STEP 5:

Use 24pcs of M6*12 screws, M6 cage nuts and M6 plastic washers to assemble the vertical supports.


Refer to the left picture.

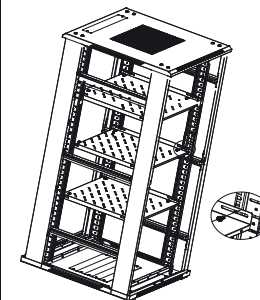

STEP 6:

Use 12pcs of M6*12 screws, M6 cage nuts and M6 plastic washers to assemble the shelf.


Refer to the left picture.

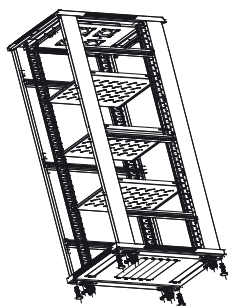

STEP 7:

Use 16pcs of M6*12 self-tapping screws to assemble the castors. After that, assemble the M12*L90 adjustable feet.


Refer to the left picture.

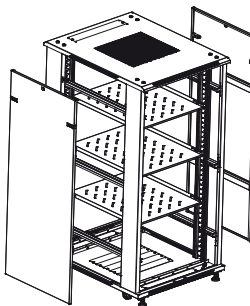

STEP 8:

Assemble the two side doors.

Refer to the left picture.

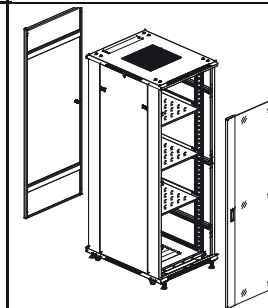

STEP 9:

Use 4mm plastic washers to assemble the front door and rear door.


Refer to the left picture.

ZAWARTOŚĆ OPAKOWANIA:

1. Panel dolny – 1szt.
2. Panel górny – 1szt.
3. Rama – 2szt.
4. Wsporniki poziome:
 - 4szt. (32U i niżej)
 - 6szt. (wyższe niż 32U)
5. Wsporniki pionowe – 4szt.
6. Drzwi boczne – 1szt.
7. Drzwi przednie – 1szt.
8. Drzwi tylne – 1szt.
9. Półki:
 - 3szt. (ponad 42U)
 - 2szt. (od 32U do 42U)
 - 1szt. (poniżej 32U)
10. Panel wentylacyjny – 1szt.
11. Panel zaślepiający – 3szt.

AKCESORIA MONTAŻOWE:


1. M12*L90 stópki – 4szt.
2. Kółka- 4szt.
3. Wsporniki boczne – 4szt.
4. M8*12 sześciokątne nakrętki – 16szt.
5. M8 śruby kołnierzowe – 16szt.
6. M6*12 Śruby:
 - 60szt. (powyżej 42U)
 - 56szt. (od 32U do 42U)
 - 36szt. (poniżej 32U)
7. 4mm podkładki plastikowe- 2szt.
8. M4*12 samogwintujące śruby – 18szt.
9. M6*12 samogwintujące śruby – 16szt.
10. M6 koszyczki z nakrętkami:
 - 60szt. (powyżej 42U)
 - 56szt. (od 32U do 42U)
 - 36szt. (poniżej 32U)
11. M6 podkładki plastikowe:
 - 60szt. (powyżej 42U)
 - 56szt. (od 32U do 42U)
 - 36szt. (poniżej 32U)

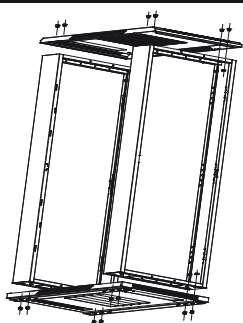

KROK 1:

Użyj 16szt. M8*12 sześciokątnych nakrętek i 16szt. śrub kołnierzowych M8 do złożenia górnej pokrywy, ram oraz dolnej pokrywy.


Tak, jak na rysunku.

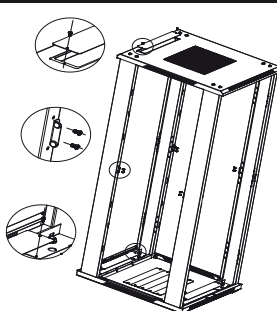

KROK 2:

Użyj samogwintujących śrub M4*8 do zamontowania panelu zaślepiającego. Następnie użyj 8szt. samogwintujących śrub M4*8 do zamocowania bocznych wsporników.


Tak, jak na rysunku.

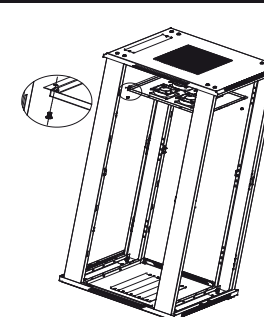

KROK 3:

Użyj 4szt. samogwintujących śrub M4*8 do zamocowania panelu wentylacyjnego.


Tak, jak na rysunku

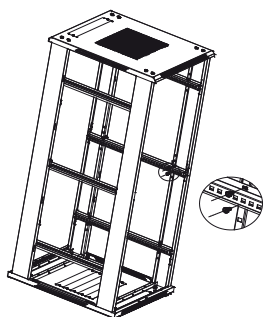

KROK 4:

Użyj 24szt. śrub M6*12, koszyczków z nakrętkami M6 i podkładek plastikowych M6 do zamocowania wsporników poziomych.


Tak, jak na rysunku.

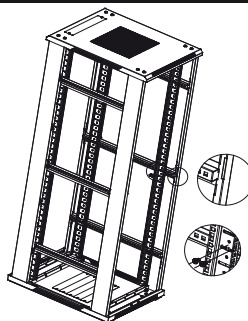

KROK 5:

Użyj 24szt. śrub M6*12, koszyczków z nakrętkami M6 i podkładek plastikowych M6 do zamontowania wsporników pionowych.


Tak, jak na rysunku.

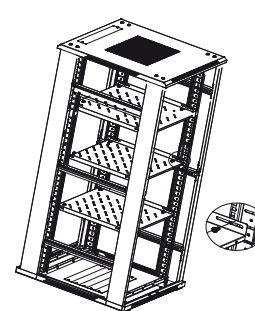

KROK 6:

Użyj śrub M6*12, koszyczków z nakrętkami M6 i podkładek plastikowych M6 do zamontowania półek.


Tak, jak na rysunku.

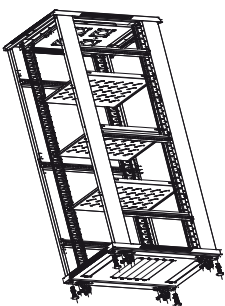

KROK 7:

Użyj 16szt. śrub samogwintujących M6*12 do zamontowania kółek. Następnie wkręć stópki M12*L90.


Tak, jak na rysunku.

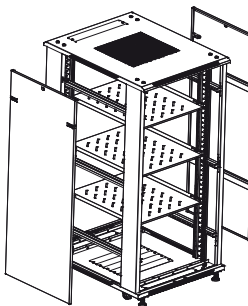

KROK 8:

Założ boczne drzwi.

Tak, jak na rysunku.

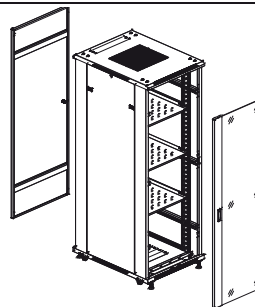

STEP 9:

Używając 4mm podkładek załóż drzwi tylne i przednie.

Tak, jak na rysunku.