NETGEAR[®]

Installation Guide

NETGEAR ProSAFE Smart Switch™ GS716Tv3 NETGEAR ProSAFE Smart Switch™ GS724Tv4 NETGEAR ProSAFE Smart Switch[™] GS748Tv5

Package Contents

- NETGEAR ProSAFE Smart Switch
- Rubber footpads for tabletop installation
- AC power cord
- Rack-mount kit for rack installation
- Installation guide
- Smart Switch resource CD that includes the Smart Control Center Utility and hardware installation guide. (A link to the online software administration manual is on the resource CD.)

Configure the Switch

Install the Smart Control Center Utility and use it to configure the switch.

Install the Smart Control Center Utility on a Computer

- 1. Insert the resource CD into your CD drive.
- 2. Run the Setup program to install the Smart Control Center Utility. The Installation Wizard guides you through the installation.

Connect Your Smart Switch

If you have a DHCP server in you network, see Connect the Switch to Your Network.

If you are using static IP addresses in you network, first see Configure the Switch with a Static IP Address, and then see Connect the Switch to Your Network.

Configure the Switch with a Static IP Address

If you are using a static IP address in you network, configure the switch IP address before connecting the switch to your network. The default IP address of the switch is 192.168.0.239.

Note: If you are using a DHCP server in your network, this procedure does not apply to you; instead, go directly to Connect the Switch to Your Network.


- Set up the computer with a static IP address in the 192.168.0.x subnet.
- Connect the computer to the switch.
- Configure the IP address of the switch to match your network configuration.

Connect the Switch to Your Network

1. Connect each computer to an RJ-45 network port on the switch front panel.

Use Category 5 (Cat 5) or better Ethernet cable terminated with an RJ-45 connector to make these connections.


Smart Switch

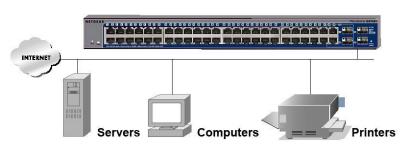

- 2. Connect the switch to your network.
- 3. Power on the switch.

Utility

screen.



2.

4. Verify that the computer with the Smart Control Center Utility is on the same subnet as the switch.

Configure the Switch with the Smart Control Center

1. Double-click the Smart Control Center Utility icon



on vour desktop or

click the icon in the Windows Start menu to run the utility and view this

Mainter	iance Ta	asks Ad	apter He	lp			QU
				Curi	rent Network Ad	apter 172.26.2	.149
IAC Address	IP Address	System	Location	DHCP	Subnet Mask	Gateway	FirmW
94:fc:87:21:e8	172.26.2.173			Enabled	255.255.255.0	172.26.2.1	6.3.0.1
6:8e:6c:3c:8e	172.26.2.169			Enabled	255.255.255.0	172.26.2.1	6.3.0.1
:6:8e:6c:3c:da	172.26.2.168			Enabled	255.255.255.0	172.26.2.1	6.3.0.1
8e:f2:ff:2d:b2	172.26.2.142			Enabled	255.255.255.0	172.26.2.1	6.0.0.68
0:5d:8a:d6:0c	172.26.2.127			Enabled	255.255.255.0	172.26.2.1	5.4.11.28
DHCP Ref	resh R	eboot Device	Web Browser	Access	Configure Device	Change	Password

Click the **Discover** button.

The Smart Control Center Utility finds the switch and displays its MAC address, IP address, and model number.

	Mainten	nance Ta	isks Ad	apter He	lp			QU
					Cur	rent Network Ad	apter 172.26.2	.149
evice List								
Product	MAC Address	IP Address	System	Location	DHCP	Subnet Mask	Gateway	Firm W
GS724Tv4	44:94:fc:87:21:e8	172.26.2.173			Enabled	255.255.255.0	172.26.2.1	6.3.0.1
GS748Tv5	28:c6:8e:6c:3c:8e	172.26.2.169			Enabled	255.255.255.0	172.26.2.1	6.3.0.1
GS748Tv5	28:c6:8e:6c:3c:da	172.26.2.168			Enabled	255.255.255.0	172.26.2.1	6.3.0.1
GS728TP	00:8e:f2:ff:2d:b2	172.26.2.142			Enabled	255.255.255.0	172.26.2.1	6.0.0.68
GS716Tv2	2c:b0:5d:8a:d6:0c	172.26.2.127			Enabled	255.255.255.0	172.26.2.1	5.4.11.28
	DHCP Ref	resh Re	eboot Device	Web Browser	Access	Configure Device	Change	Password

If the utility does not discover your switch, verify that the cable connections are secure and that the IP address configuration of the computer is in the same subnet as the switch, and click the **Discover** button.

3. Click the row for the switch that you want to configure.

NETGEAR, the NETGEAR logo, and Connect with Innovation are trademarks and/or registered trademarks of NETGEAR, Inc. and/or its subsidiaries in the United States and/or other countries. Information is subject to change without notice. © NETGEAR, Inc. All rights reserved.



NETGEAR, Inc. 350 East Plumeria Drive San Jose, CA 95134 USA Click the **Web Browser Access** button to view the switch Login screen.

a Login	
Password	

5. Enter the default password of **password** in lower-case letters and click the Login button.

The System Information screen displays

NETGEAR'

System Switching Routing QoS Security Monitoring Maintenance Help Index Management | Device View | License | SNMP | LLDP | Services System Information System Information **IP Configuration** IPv6 Network GS748Tv5 ProSafe 48-port Gigabit Ethernet Smart Switch, Product Name 6.3.0.1, B1.0.0.1 Configuration **IPv6** Network System Name Neighbor System Location Time System Contact **Denial of Service** Serial Number 3H31377000007 DNS **Green Ethernet** System Object OID 1.3.6.1.4.1.4526.100.4.33 Jul 25 10:08:41 2013 (UTC+0:00) Date & Time System Up Time 0 days 2 hours 27 mins 12 secs Base MAC Addres 28:C6:8E:6C:3C:DA FAN Status Status System 1 OK Versions Software Versi GS748Tv5 B1.0.0.1 6.3.0.1 REFRESH CANCEL APPLY

Configure the switch for your network. 6.

For more information, see the software administration manual

Troubleshooting Tips

- Be sure to power on your computer and switch in the following sequence: •
 - 1. Turn on the switch and wait about two minutes.

GS748T

ProSafe^o 48-Port Gigabit Smart Switch

Make sure the network settings of the computer are correct. • In most cases, computers should be configured to obtain an IP address through DHCP. If your network uses static IP addresses, be sure that the switch and computer are configured with valid IP addresses. For more information, see the software administration manual.

Support

resources.

August 2013

Here are some tips for correcting simple problems you might have.

- 2. Turn on the computer and connect to the switch.
- Make sure the Ethernet cables are plugged in.
 - For each powered-on computer connected to the switch, the corresponding switch LAN port status LED is lit.

- Thank you for selecting NETGEAR products.
- After installing your device, locate the serial number on the label of your product and use it to register your product at https://my.netgear.com.
- You must register your product before you can use NETGEAR telephone support. NETGEAR recommends registering your product through the NETGEAR website. For product updates and web support, visit http://support.netgear.com.
- NETGEAR recommends that you use only the official NETGEAR support
- For the current EU Declaration of Conformity, visit http://support.netgear.com/app/answers/detail/a id/11621/.